


Installation instructions


NOTE: Before installing, make sure the power supply is switched off.

- A Fix the ceiling plate on the wall and mark the position of the installation hole with a pen.
- B Drill the hole position with Ø6 drill bit
- C Fix the mounting rubber particles in the mounting hole.

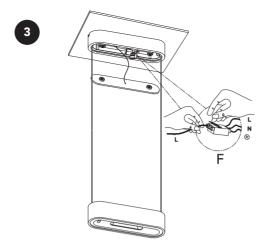


F Connect the power cord and the input line of the lamp body into the terminal according to the identification to fix it

NOTE: The ceiling/lamp base can be used as installation box.

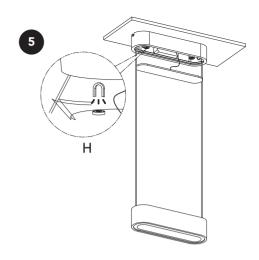


H Then align the decorative cover with the magnet position to fix it, turn on the main power switch




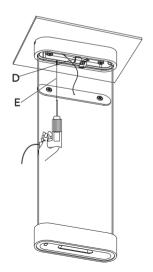


- Put the wall power cord into the ceiling
- E Then fix the mounting screw to the mounting position

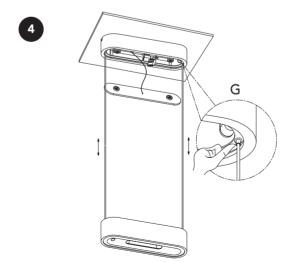

G Press the lifter with your hand to adjust the wire up and down to a suitable position

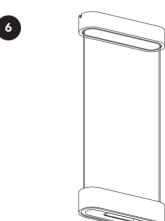

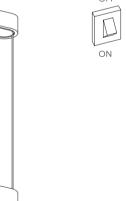

- Dimmable with;
- Integrated LIGHT-POINT SMART TUNE Powered by Casambi
- Integrated Touchless sensor

Installation is complete

- External Casambi compatible switches Installation instructions

*This product cannot be controlled by external trailing-edge dimmer

LIGHT-POINT.COM

AURA User Instructions

LIGHT·POINT

General use

- The product is designed for indoor use only.
- The lamp gets hot after prolonged use, therefore, do not cover the product.

Cleaning instructions

- Before cleaning, ensure that the power supply is switched off.
- Wipe surface of lamp shade with a soft cloth.
- Do not use any abrasive cleaning tools such as steel wool, scouring sponges or stiff brushes.
- Never use strong cleaning agents such as white spirit, household glass cleaner or cellulose thinners.

Safety precautions

- The appliance should be installed, connected and tested by qualified electrician and in accordance with local regulations.
- Turn off the power supply before installation or maintenance of the lamp, and make sure that the cables are not squeezed or damaged by sharp edges during installation.
- The lamp should not be covered by insulation blankets or similar materials.





ON / OFF

swipe your hand under the sensor





DIMM

hold your hand still under the sensor to adjust the light level



powered by casambi



TUNABLE WHITE / TO WARM

move your hand up to / away from the sensor and hold your hand still to set the color temperature

International warranty

Your product has gone through rigorous testing in order to live up to the highest quality standards. It therefore carries a 7-year warranty from the date of the original retail purchase receipt, covering defects in materials and workmanship when used normally in accordance with the published LIGHT-POINT guidelines.

These guidelines include but are not limited to information contained in technical specications, safety instructions and guick start guides. LIGHT-POINT is not responsible for damage arising from failure to follow instructions relating to the use of the product.

LIGHT-POINT is a registered trademark of NORDIC LIVING GROUP.

For more information, please visit

LIGHT-POINT.COM

For more information about getting connected with your smartphone/tablet device, please visit;

LIGHT-POINT Smart Tune

https://en.light-point.com/shop/cms-light-point/smarttune.html

Please note: All the latest Casambi installation guides can be found at the above link or scan the OR code below.



