
## **RETO** wall recessed


INSTALLATION INSTRUCTIONS | SEPTEMBER 2022



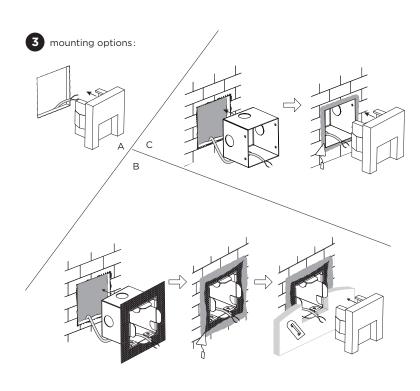


powered off before connecting cables.

 Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



#### **DIMENSIONS**

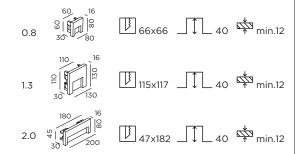





70x70 60 90012047 for 0.8



122x122 1 60 90012041 for 1.3



191x58 1 60 90012039 for 2.0 concrete housing (optional):



70x70 1 60 90012046 for 0.8



121x121 1 60 90012040 for 1.3




192x58 1 60 90012044 for 2.0

#### MOUNTING INSTRUCTION

- Make a hole in the wall according to the prescribed dimensions of the fixture or the recessed housing.
- 2 POWER CONNECTION

Connect to 220-240V. Always use a driver according to the specifications of the fixture.

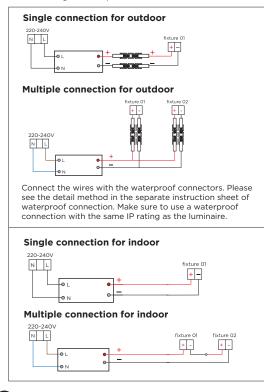




B - Insert the fixture in the plasterkit.

C - Insert the fixture in the concrete housing.



# **RETO** wall recessed

INSTALLATION INSTRUCTIONS | SEPTEMBER 2022

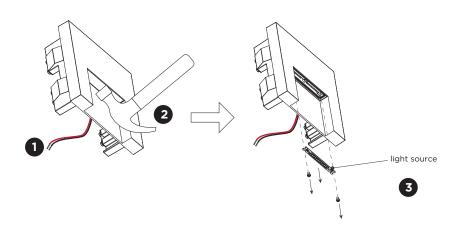

### **DISMOUNTING INSTRUCTIONS**

Light source

- Pull out the fixture and disconnect the wires between the fixture and the driver.
- 2 Break the lens.
- 3 Unscrew the light source, disconnect the wires and remove it.



The light source is not replaceable.

This luminaire contains a light source with the corresponding energy class:

RETO Iuminaire type	Energy class
outdoor 0.8/1.3/2.0	A G
indoor 0.8	A G
indoor 2.0	A † G