
FINLIN


INSTALLATION INSTRUCTIONS | NOVEMBER 2025

Installation method of 1.0/2.0/3.0/4.0

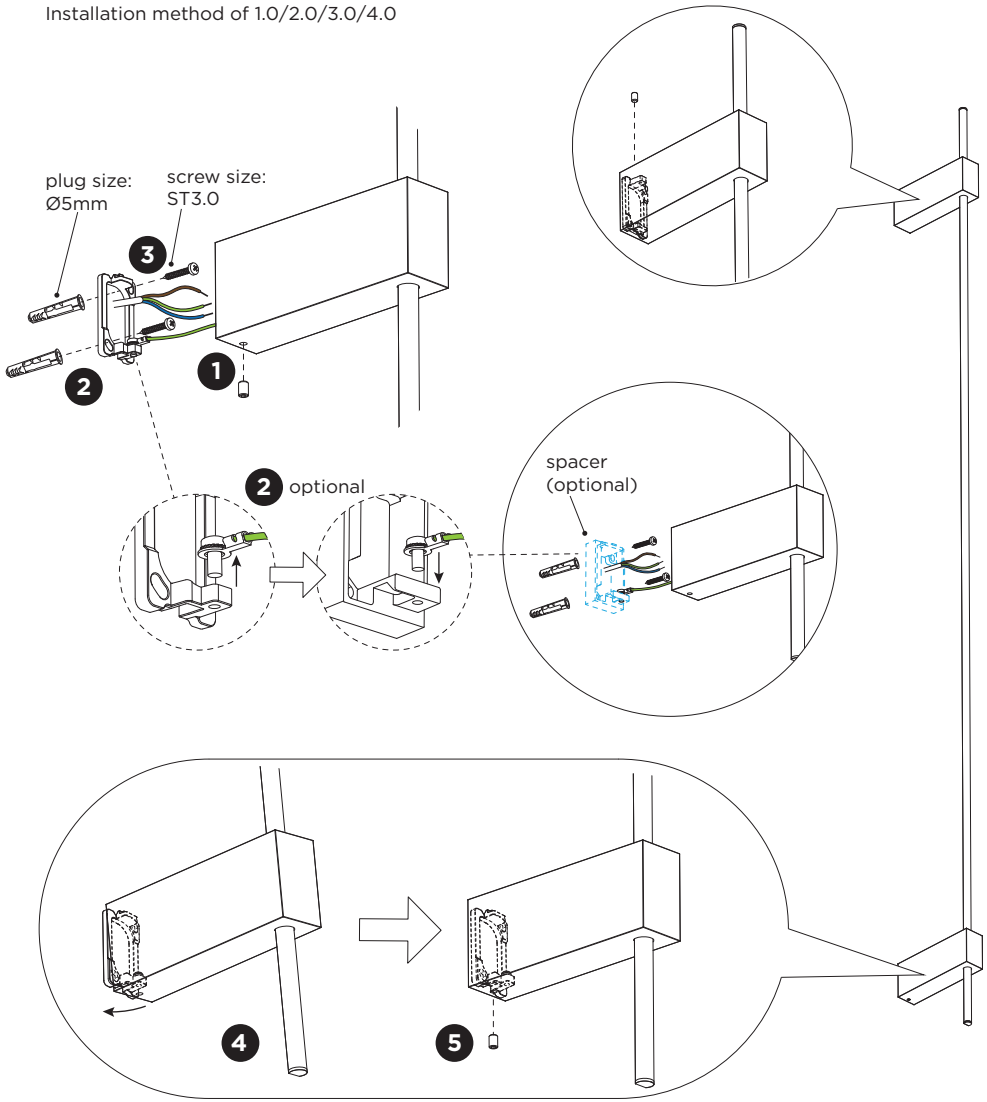


Note: for 3.0, the direction of the upper and lower mounting bases are symmetrical to each other.


Spacer:

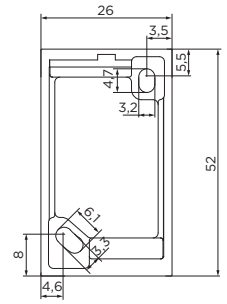

Mounting base:

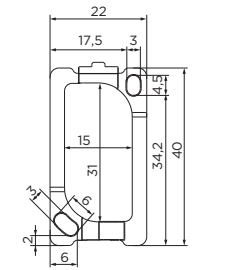

DIMENSIONS

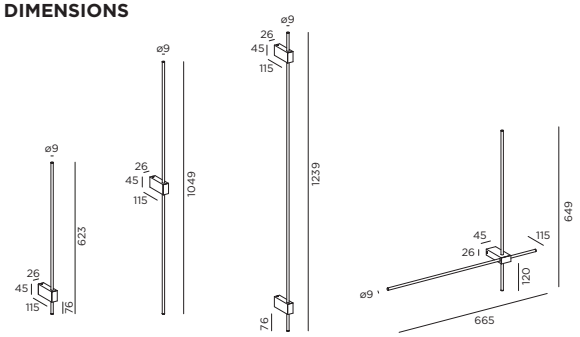


1.0 2.0 3.0 4.0

MOUNTING INSTRUCTION

1. Remove the mounting base from the luminaire by loosening the socket screw.
2. Mount the base on the wall with the screws (included).

   Optional spacer (not included):
   Remove the screw, the locking washer and the grounding cable from the mounting base and fix it on the spacer.
   Mount the spacer on the wall with the screws (included).
3. **POWER CONNECTION**
   Connect to 220-240V.

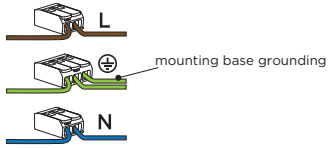



4. Attach the luminaire to the mounting base (or spacer) with the upper side first and tilt towards the wall.
5. Fix the luminaire on the base (or spacer) with the socket screw.

PB19-010-688-00_v7

WEVER & DUCRÉ
LIGHTING

WEVER & DUCRÉ BV
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com

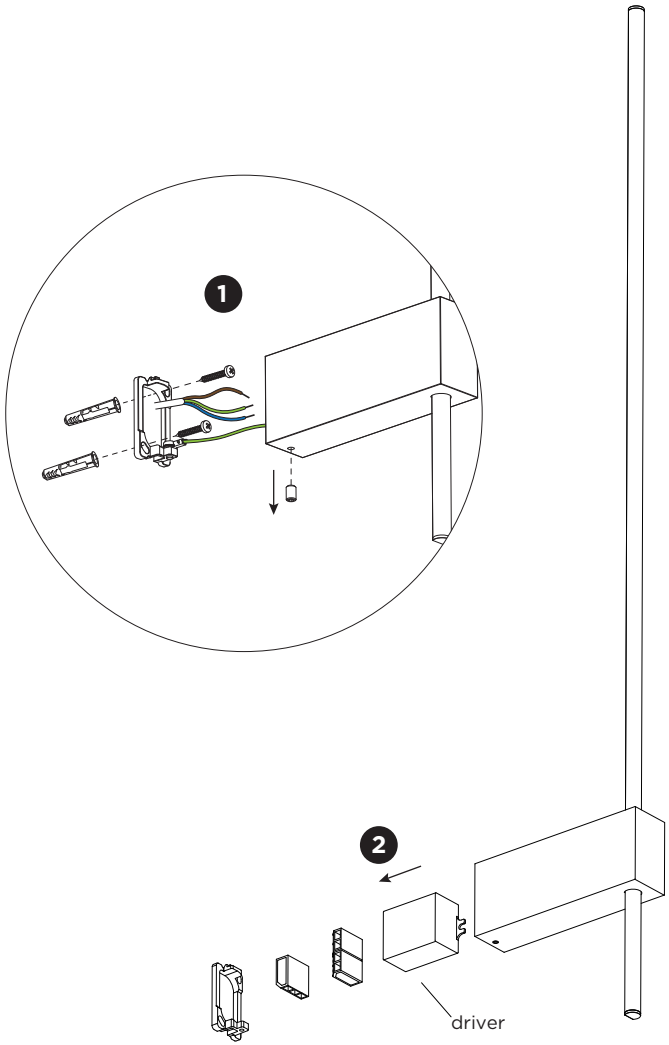

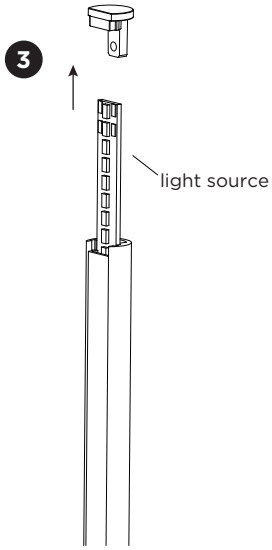

DISMOUNTING AND RECYCLING INSTRUCTIONS
Light source & driver

1. Remove the luminaire from the mounting base by loosening the socket screw and disconnecting the wires.
2. Loosen the wires and remove the driver.
3. Remove the endcap and pull out light source.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



The driver can be replaced by the end user.



This luminaire contains a light source with the energy class F.

WEVER & DUCRÉ BV
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com